


Scheme No B028 : Last Updated Apr 2019  
 © Free-Way 2019


# FREE-WAY SWITCH

www.freewayswitch.com




MANUFACTURED IN ENGLAND BY NSF CONTROLS LTD

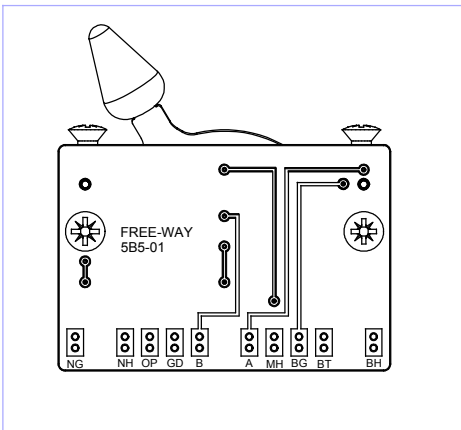

REVERSE VIEW OF PICKUPS, SWITCH AND POTENTIOMETERS.

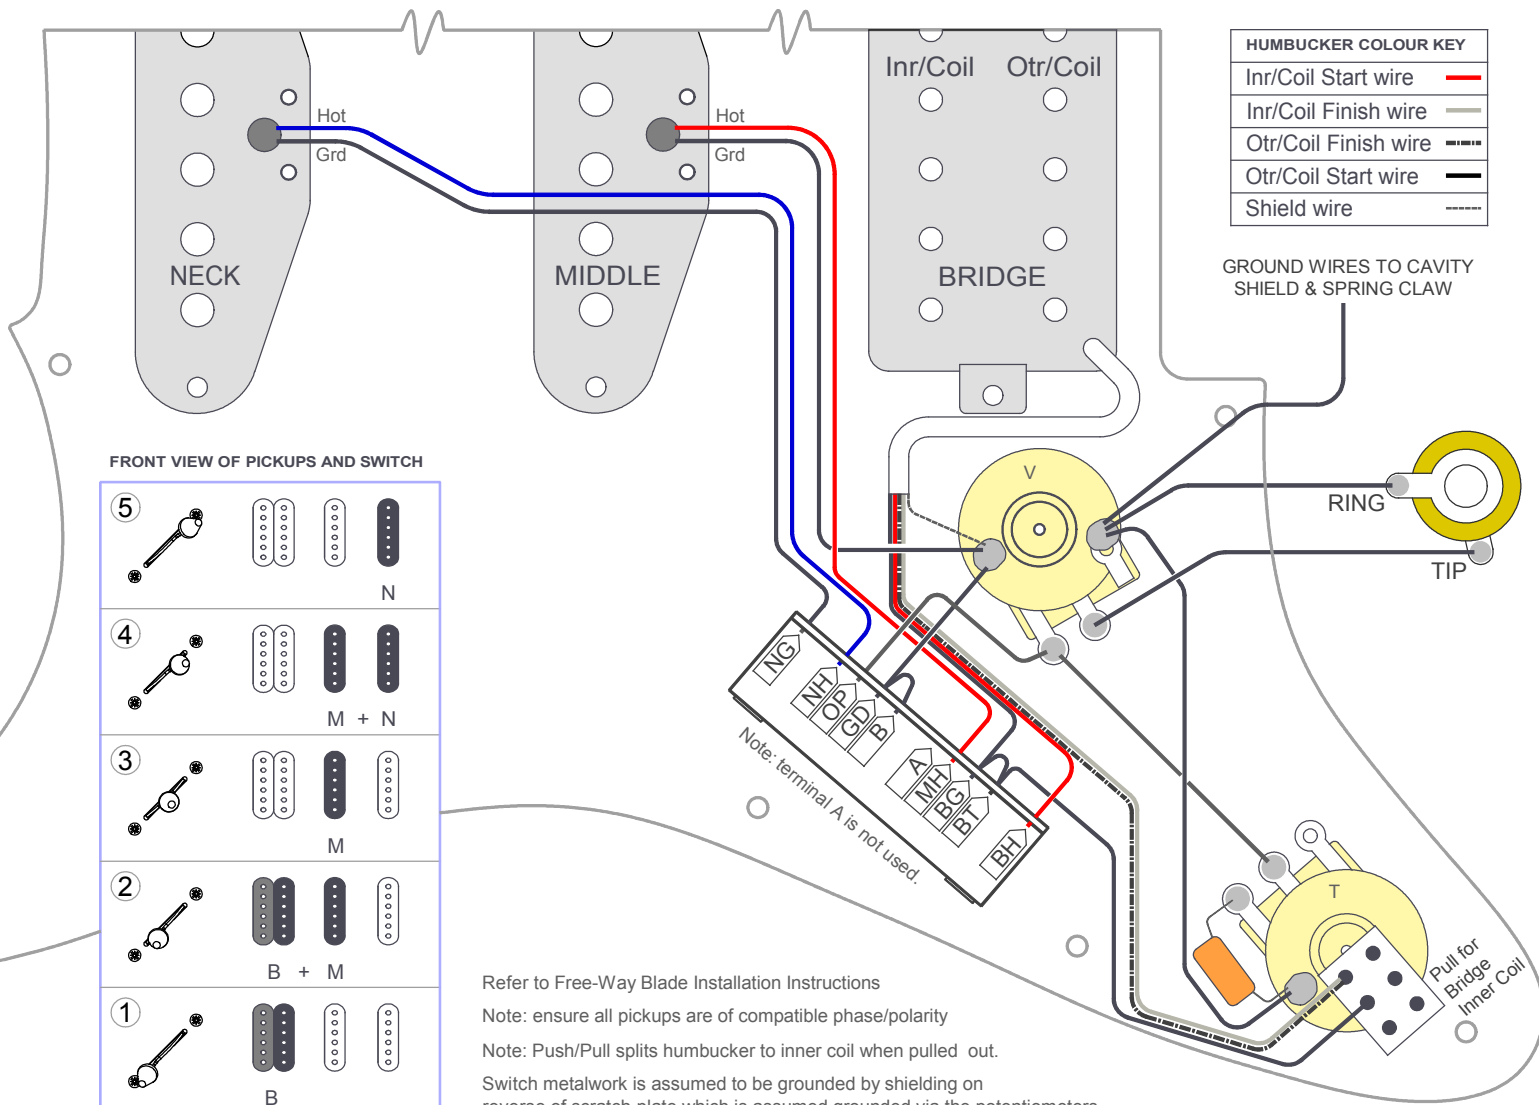

HUMBUCKER COLOUR KEY	
Inr/Coil Start wire	— (Red)
Inr/Coil Finish wire	— (Grey)
Otr/Coil Finish wire	— (Black)
Otr/Coil Start wire	— (Blue)
Shield wire	— (Dashed)

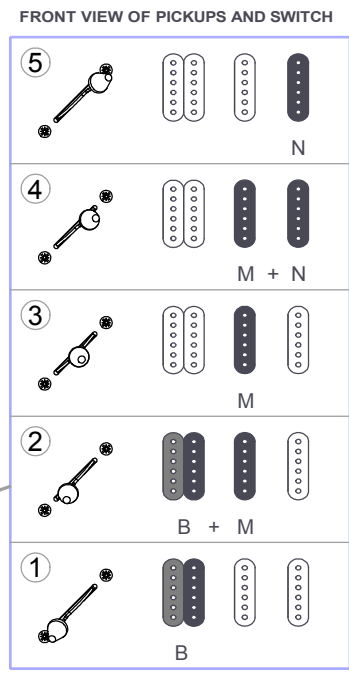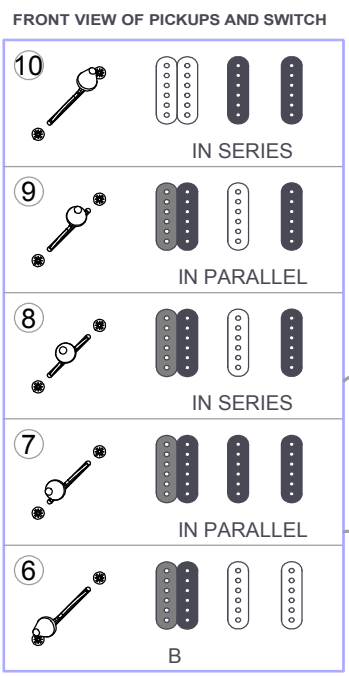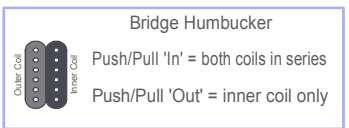

Refer to Free-Way Blade Installation Instructions  
 Note: ensure all pickups are of compatible phase/polarity  
 Note: Push/Pull splits humbucker to inner coil when pulled out.  
 Switch metalwork is assumed to be grounded by shielding on reverse of scratch-plate which is assumed grounded via the potentiometers

Model No:- 5B5-01



HSS Parallel Series Scheme P/P 1V/1T