


Scheme No B027 : Last Updated Apr 2019  
 © Free-Way 2019


# FREE-WAY SWITCH

www.freewayswitch.com


MANUFACTURED IN ENGLAND BY NSF CONTROLS LTD

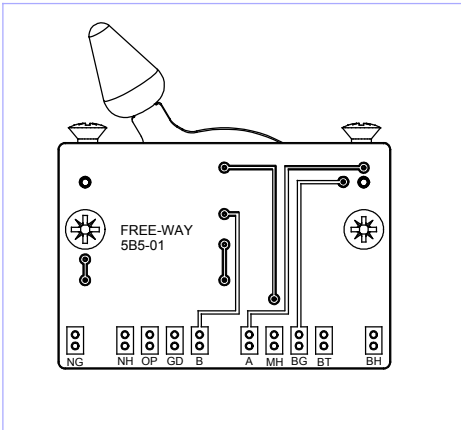


REVERSE VIEW OF PICKUPS, SWITCH AND POTENTIOMETERS.

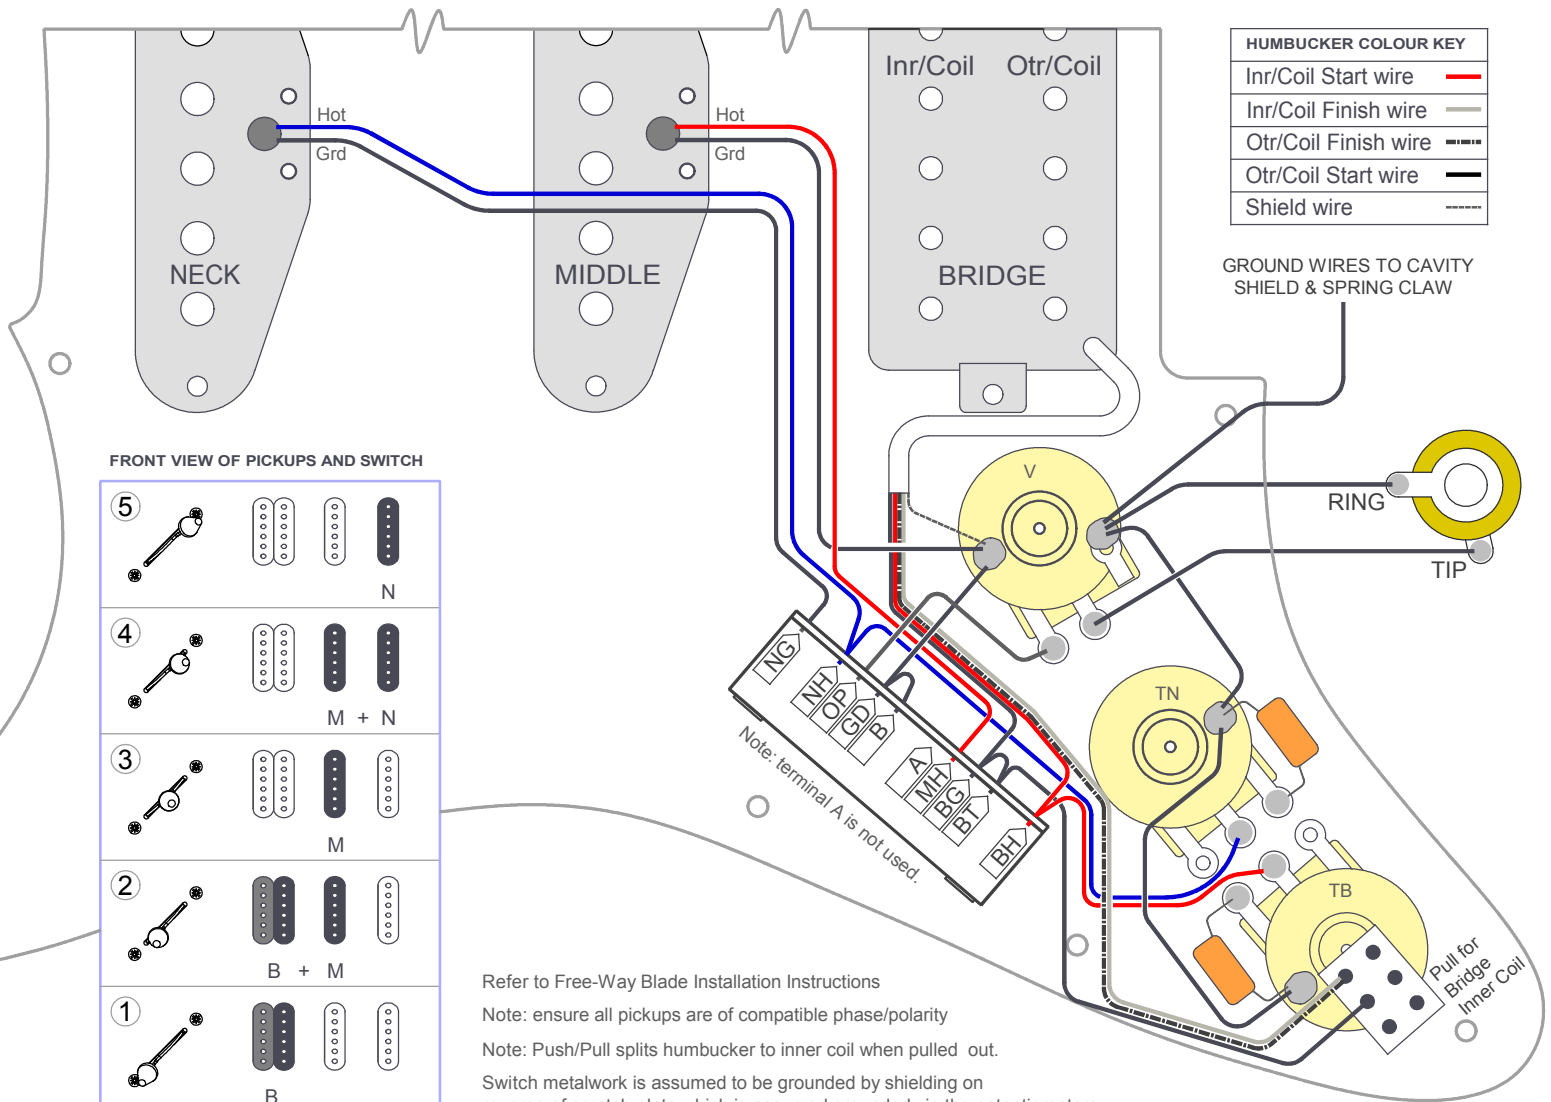


HUMBUCKER COLOUR KEY	
Inr/Coil Start wire	— (Red)
Inr/Coil Finish wire	— (Grey)
Otr/Coil Finish wire	— (Black)
Otr/Coil Start wire	— (Blue)
Shield wire	— (Dashed)

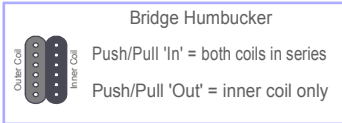

FRONT VIEW OF PICKUPS AND SWITCH

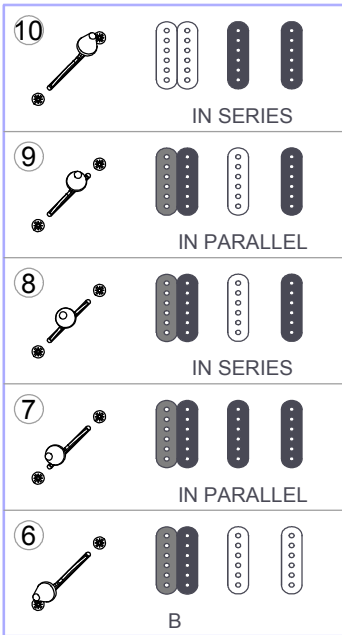

FRONT VIEW OF PICKUPS AND SWITCH

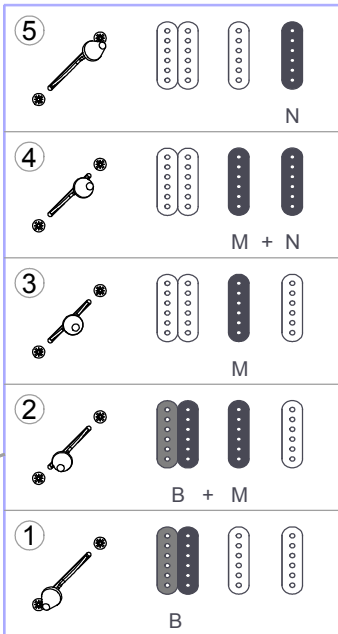

Refer to Free-Way Blade Installation Instructions

Note: ensure all pickups are of compatible phase/polarity

Note: Push/Pull splits humbucker to inner coil when pulled out.

Switch metalwork is assumed to be grounded by shielding on reverse of scratch-plate which is assumed grounded via the potentiometers

Model No:- **5B5-01**